 





Thank you very much for purchasing EZMAX+ product. Please read this manual carefully before use.

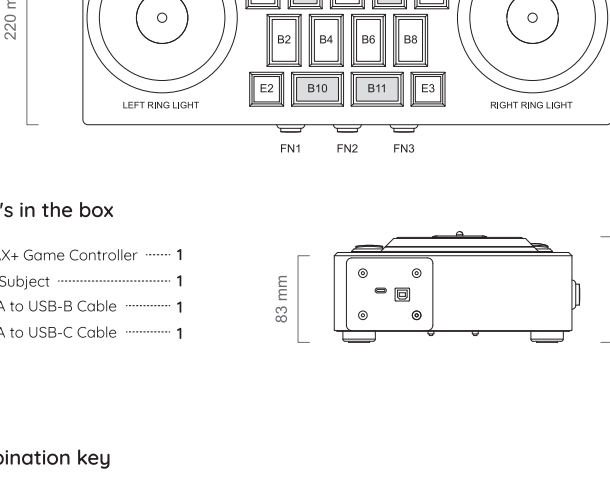

What's in the box

 - EZMAX+ Game Controller 1
- Main Subject 1
- USB-A to USB-B Cable 1
- USB-A to USB-C Cable 1

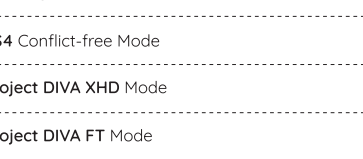

Combination key

Press and hold the combination keys at the same time for 1 second, the corresponding key light flashes, indicating that the switch is successful.

Combination key	Game Mode
FN2 + B1	PS4 Beginner Mode
FN2 + B3	PS4 Conflict-free Mode
FN2 + B7	Project DIVA XHD Mode
FN2 + B9	Project DIVA FT Mode
FN2 + B2	INFINITAS 1P Mode
FN2 + B4	INFINITAS 2P Mode
FN2 + B6	BMS Mode
FN2 + B8	SDVX Mode
FN2 + E1	Switch Beginner Mode
FN2 + E4	Switch Conflict-free Mode
FN2 + E2	Steam Beginner Mode
FN2 + E3	Steam Conflict-free Mode
FN2 + B10	Keyboard Mode
FN2 + B11	Keyboard + Mouse Mode
Double click FN2	Switch the click / double click functions of E2 and E3. (This function is only valid in the PS4 Beginner Mode, other modes are invalid)
Long press FN2	Hold for more than 1 second to display the key light of current mode.

Combination key	Function
FN1 + B3	Switch LEFT RING LIGHT mode
FN1 + B5	Switch LIGHT-BAR mode
FN1 + B7	Switch RIGHT RING LIGHT mode
FN1 + B2 + Left turntable	Adjust LEFT RING LIGHT color
FN1 + B4 + Left turntable	Adjust LEFT RING LIGHT brightness
FN1 + B6 + Right turntable	Adjust RIGHT RING LIGHT color
FN1 + B8 + Right turntable	Adjust RIGHT RING LIGHT brightness
FN1 + B10 + Left turntable	Adjust LIGHT-BAR color
FN1 + B11 + Left turntable	Adjust LIGHT-BAR brightness
FN1 + E1	Reduce the dead zone for rotary table (improve the turntable sensitivity)
FN1 + E4	Increase the dead zone for rotary table (reduce the turntable sensitivity)
FN1 + E2 + E3	Light switch. All lights on / RGB light off / Key lights off / All lights off

More functions may be added in the future, please follow on [Twitter @GamoTwo](#).

In the following key layout, if there is no key value marked on the key, the key value is null.

FN2 + B1

PS4 Beginner Mode

Suitable for music games on **PS4**, such as **DJMAX**, **MUSYNX**, **Taiko Drum Master**, etc. The key layout of this mode refers to the gamepad, which is suitable for beginning players. Due to the platform mechanism, the up and down buttons and the left and right buttons can not be triggered at the same time.

FN2 + B3

PS4 Conflict-free Mode

Suitable for music games on **PS4**, such as **DJMAX**, **MUSYNX**, **Taiko Drum Master**, etc. This mode is suitable for advanced players who need to customize key value. It optimizes the key layout without key conflicts.

FN2 + B7

PS4 Project DIVA XHD Mode

Suitable for **Project DIVA XHD** on **PS4**.

FN2 + B9

PS4 Project DIVA FT Mode

Suitable for **Project DIVA Future Tone** on **PS4**.

FN2 + B2

INFINITAS 1P Mode

Suitable for **beatmania IIDX INFINITAS 1P**.

FN2 + B4

INFINITAS 2P Mode

Suitable for **beatmania IIDX INFINITAS 2P**.

FN2 + B6

BMS Mode

Suitable for **BMS** players (such as **LR2/ beatoraja**, etc.), emulator (such as **MAME/ PCSX2**, etc.) **DJ** music game with two-key turntable (such as **Ez-Muse II**, etc.), and any simulation software that supports controllers.

FN2 + B8

Sound Voltex PC mode

Suitable for **SoundVoltex** Konaste version.

FN2 + E1

SWITCH Beginner Mode

Suitable for **SWITCH** games, such as **DEEMO**, **Hatsune Miku**, **Taiko Drum Master**, **tetris**, etc. The key layout of this mode refers to the gamepad, which is suitable for beginning players. Due to the platform mechanism, the up and down buttons and the left and right buttons can not be triggered at the same time.

FN2 + E4

SWITCH Conflict-free Mode

Suitable for **SWITCH** games, such as **DEEMO**, **Hatsune Miku**, **Taiko Drum Master**, **tetris**, etc. This mode is suitable for advanced players who need to customize key config. It optimizes the key layout without key conflicts. This mode is suitable for the Hatsune Miku game on **steam**.

FN2 + E2

Steam Beginner Mode

Suitable for any game on **Steam**. Caution! This mode is recognized as a **PS4 controller** on **Steam**, which is suitable for any games that support **PS4 controller** on **Steam**.

FN2 + E3

Steam Conflict-free Mode

Suitable for any game on **Steam**. Caution! This mode is recognized as a **PS4 controller** on **Steam**, which is suitable for any games that support **PS4 controller** on **Steam**. This mode is suitable for advanced players who need to customize key config. It optimizes the key layout without key conflicts. (The key conflict means that ← and → cannot be output at the same time, ↑ and ↓ cannot be output at the same time).

FN2 + B10

Keyboard Mode

 
The turntable output is the keyboard value, suitable for any games that support the keyboard.

FN2 + B11

Keyboard & mouse Mode

The turntable output is the **X-axis** and **Y-axis** of the mouse, suitable for **OSU!**, **Spin Rhythm**.

Connect

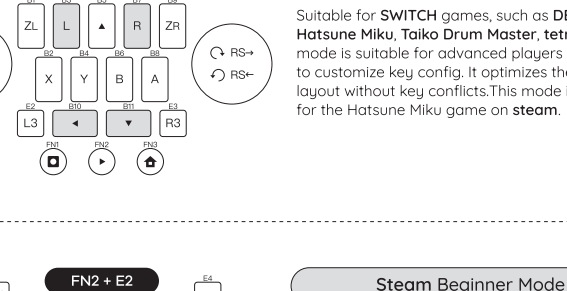

CAUTIONS

- ※1. **USB-HUB** is not recommended. If necessary, please use **USB-HUB** with independent power supply.
- ※2. It is recommended that the **USB-B** cable be connected to the **USB** port on the computer motherboard.
- ※3. **USB-C** cable can be connected to any **USB-A** port (it must provide more than **1A** current).
- ※4. The product consumes less than **350mA** (not including the RGB lights), most **USB2.0** ports provide **350mA** of current at least. If the device is not working properly, please try to connect the **USB-B** cable to the **USB** port on the **PC** motherboard, sufficient current supply will be provided.



For the usage of the adjustment software and calibration procedures, please visit dj-dao.com/en/support

Warranty period: 180 days from delivery date

Our company warrant that we will comply with this aftermarket terms, and it doesn't cover the accessories of this product.

- Within 1-7 days, whatever problem happens, our company will provide free maintenance, free replacement, and bear the shipping cost.
- Within 8-30 days, only in the case of normal use, we will provide free maintenance, free replacement. The shipping cost need to be born by the customer.
- Within 31-180 days, we will provide technical support via email, and free maintenance. The cost for replacement and shipping need to be born by the customer.
- If it were beyond 180 days, we only provide technical support via email. The other cost need to be born by the customer.

This warranty doesn't cover following cases, and our company will provide paid maintenance service.

- Doesn't provide order number when asking for maintenance.
- Second-hand products.
- The failure/damage caused by fire, earthquake, flood, public nuisance, lighting strike, salt injury and the other natural disasters.
- The failure/damage caused by dropping or impacting this product during the shipment, movement.
- The failure/damage caused by wrong connection method, or the operation not in accordance with the guide.
- The failure/damage caused by the operation not in accordance with the notices.
- The failure/damage caused by unauthorized modification.

@gamotwo

sales@gamo2.com