 




DIVALLER




产品说明书

非常感谢购买DIVALLER产品，请在使用前仔细阅读本说明书

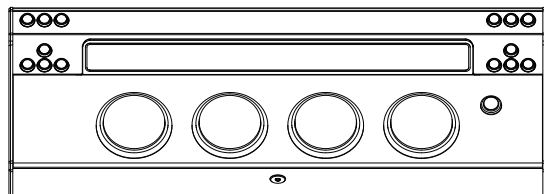

产品清单




本体	1 PCS
产品说明书	1 PCS
TYPE-C to TYPE-A 电缆	1 PCS
TYPE-B to TYPE-A 电缆	1 PCS

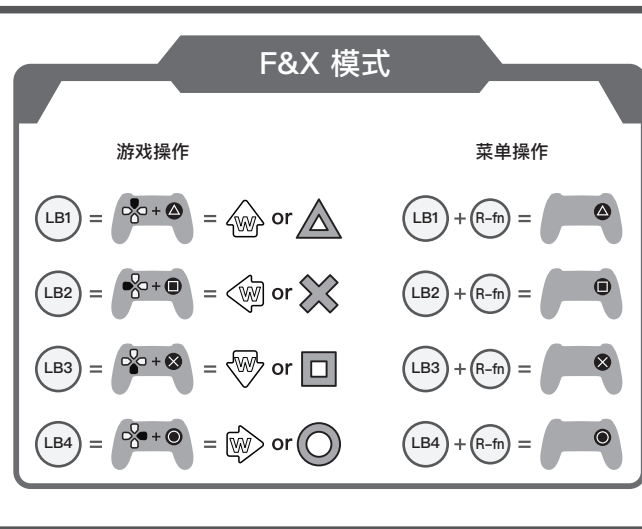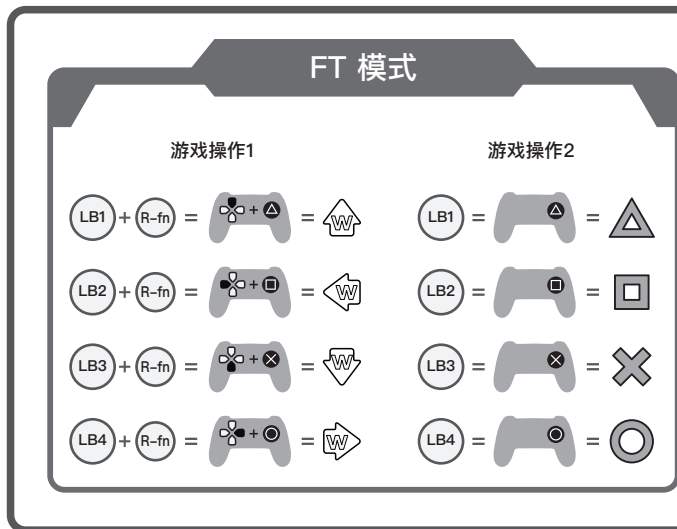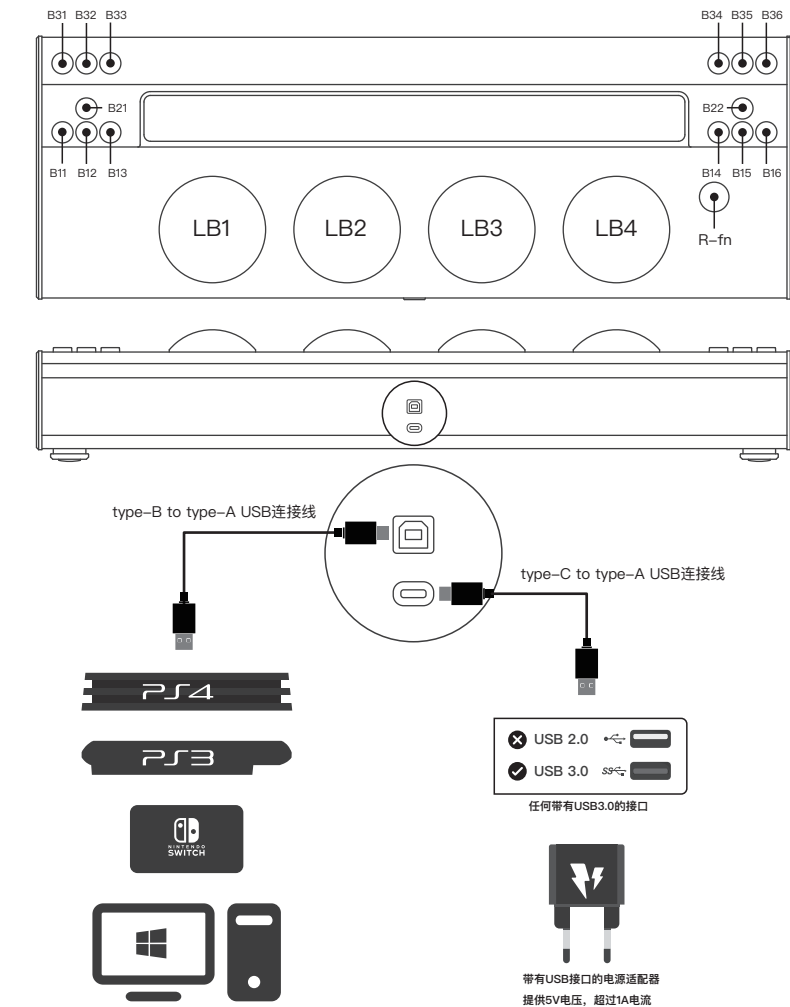   

组合键列表

长按组合键1秒，LB1-LB4按键灯闪烁3次，代表切换成功。

R-fn + B31	切换 FT 模式 / F&X模式
R-fn + B32	PPD 布局
R-fn + B33	DS4 布局
R-fn + B34	16KEY 布局
R-fn + B11	更改 TouchSlider 颜色，色相值-
R-fn + B13	更改 TouchSlider 颜色，色相值+
R-fn + B21	Touch Slider 灯光模式切换，水纹效果 / 彩虹效果

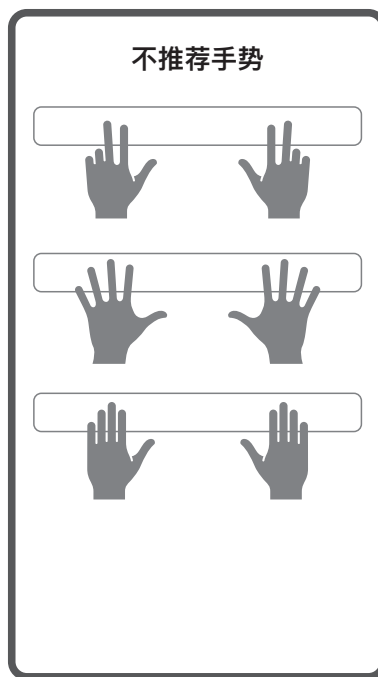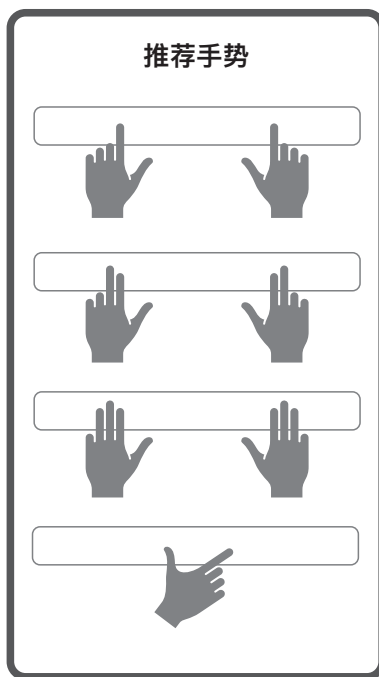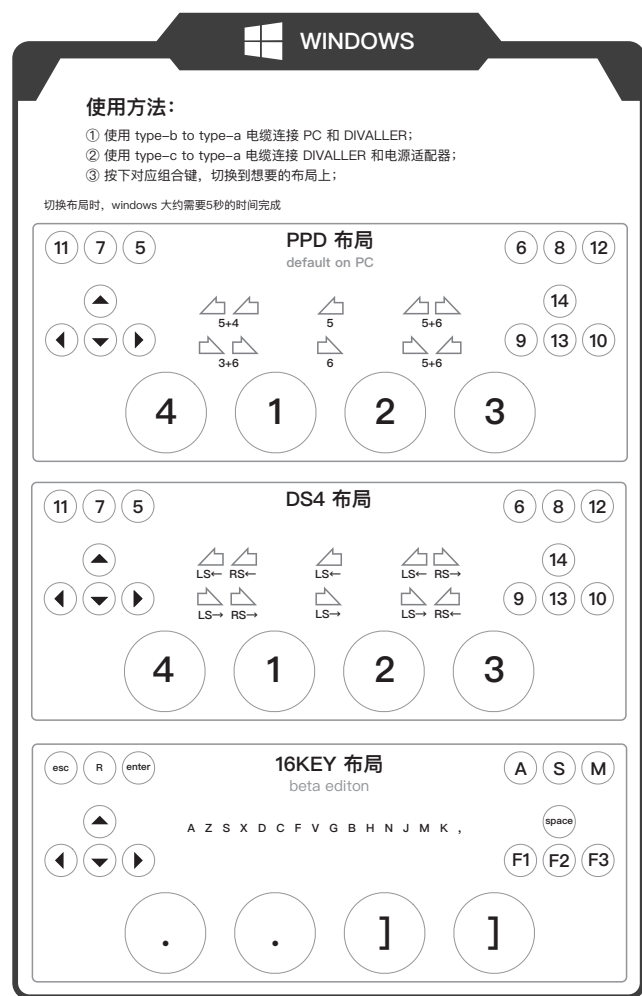   

!!! 重要的事项 !!!

- 重新插拔USB，建议等待5秒以上，再插入USB；
- Touch Slider，请快速滑动；
- F / F 2nd / X-HD中的★，建议单次滑动后，抬手后再操作；双手交替滑动效果更好；



 
PS3 PS4 为SONY公司注册商标；Nintendo Switch 为任天堂公司注册商标；
F / F 2nd / X-HD / FT 为SEGA公司projectDIVA游戏缩写；



DIVALLER



取扱説明書

DIVALLER をご購入いただきありがとうございます。ご使用前に必ず本取扱説明書をお読みください

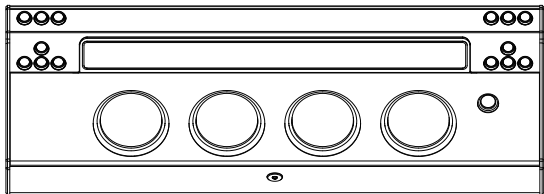

同梱物





本体		1 PCS
取扱説明書		1 PCS
TYPE-C to TYPE-A ケーブル		1 PCS
TYPE-B to TYPE-A ケーブル		1 PCS

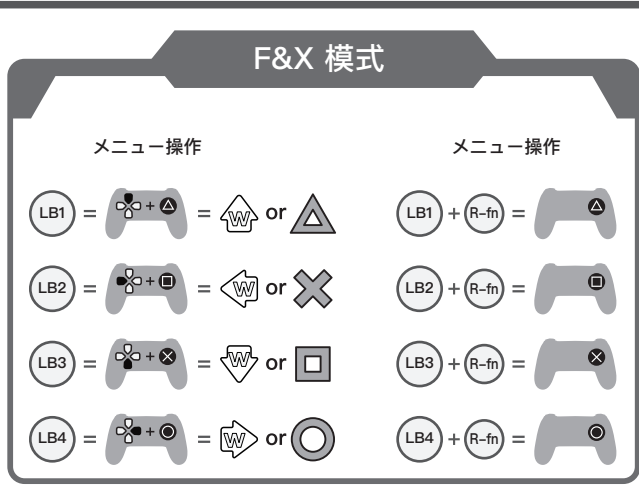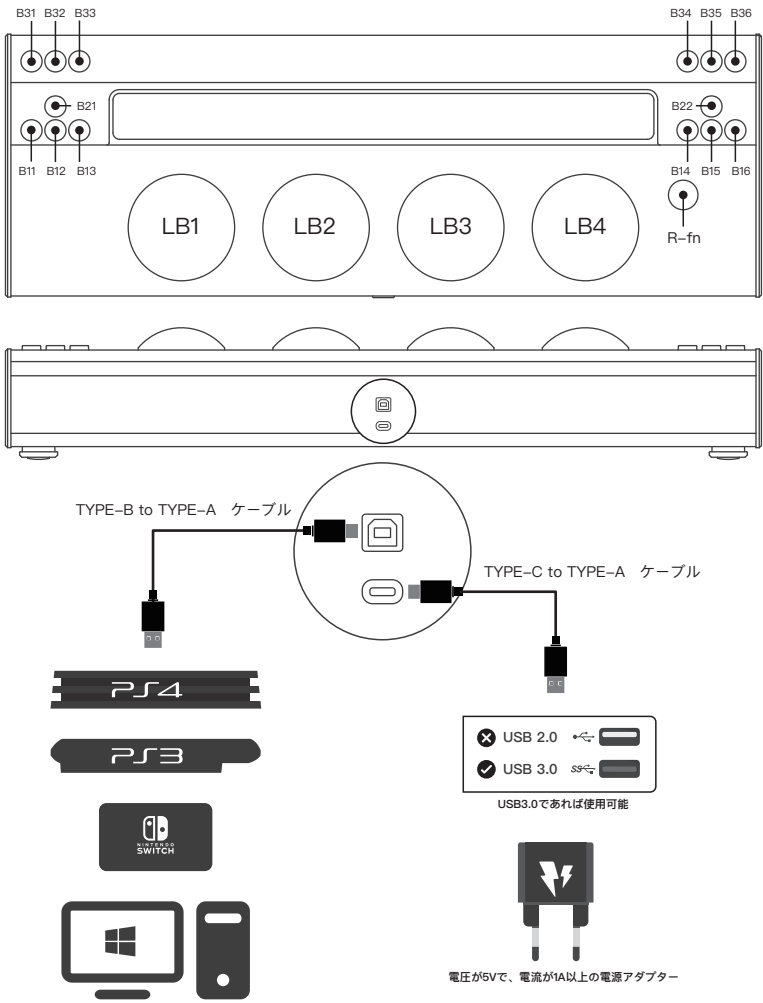  

キーコンビネーション

キーコンビネーションを1秒以上長押しして、LB1～LB4ボタンが3回点滅したら、切り替え成功です。

R-fn + B31	FTモード・F&Xモードの切替
R-fn + B32	PPD 配置
R-fn + B33	DS4 配置
R-fn + B34	16KEY 配置
R-fn + B11	TouchSliderの色を変更、色相値-
R-fn + B13	TouchSliderの色を変更、色相値+
R-fn + B21	TouchSliderのライトモード（水紋・虹色）の切替

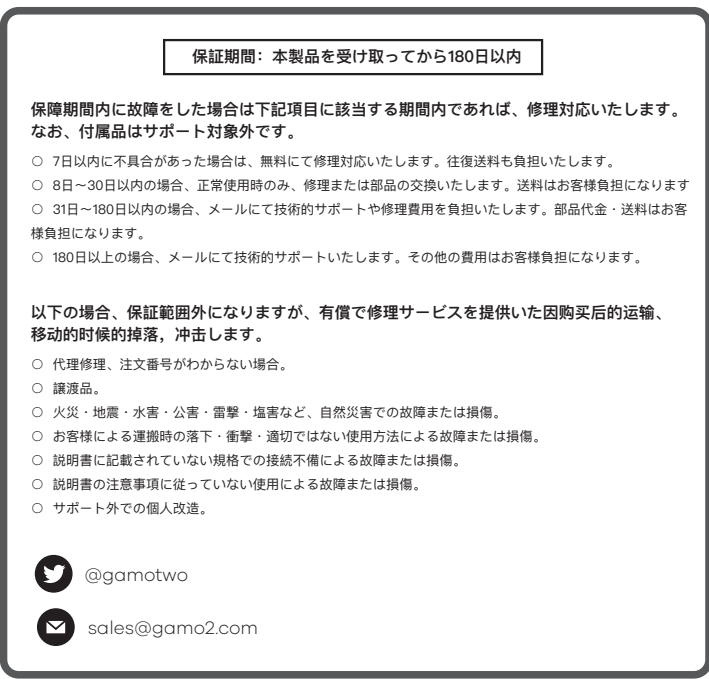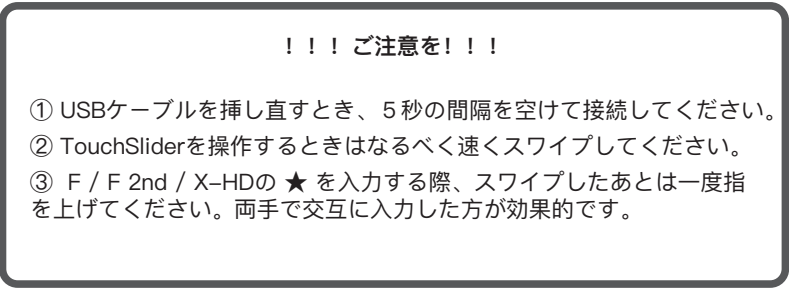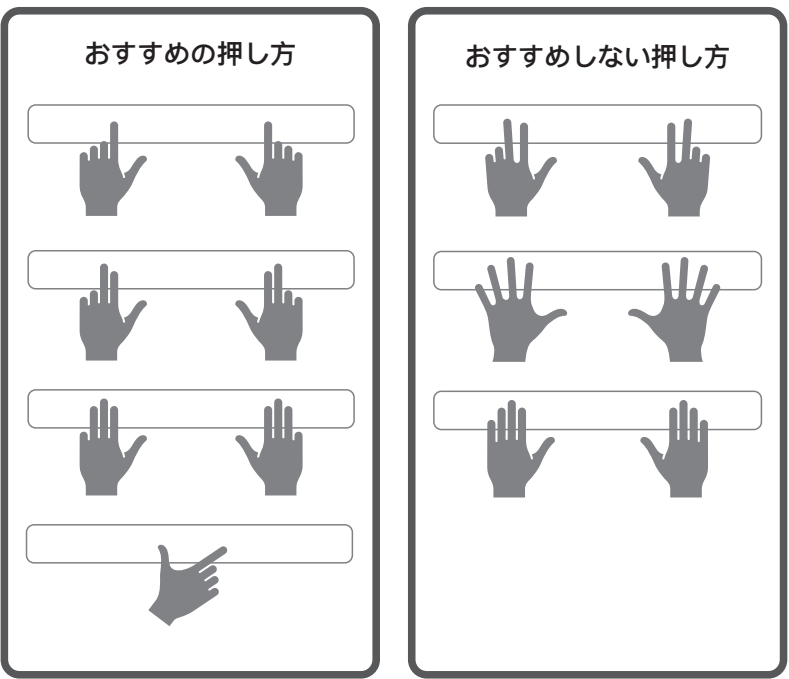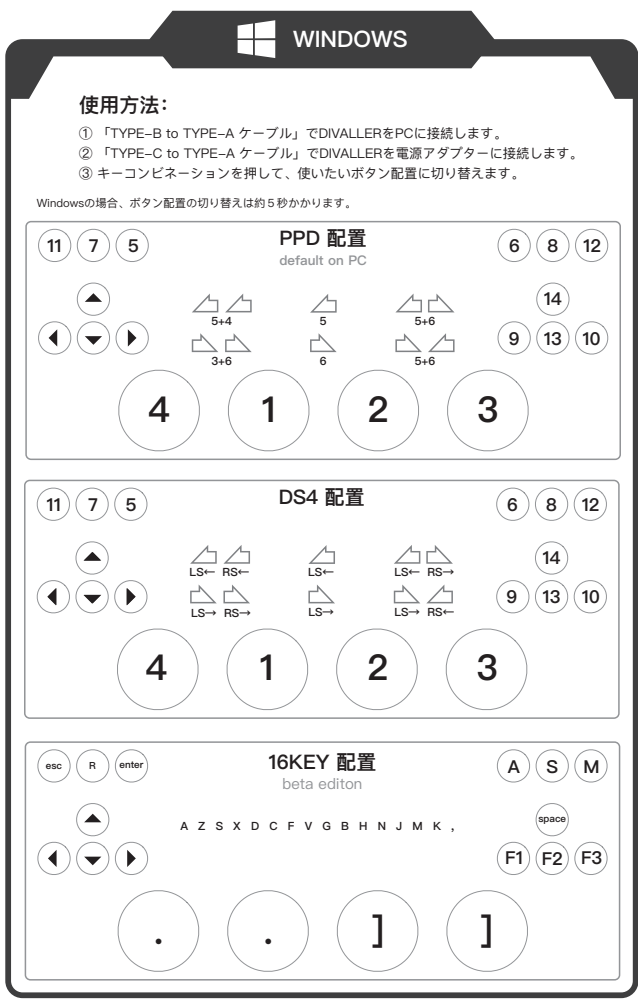    




DIVALLER







Product Manual

 Thanks for buying DIVALLER product, please read the manual before use it.

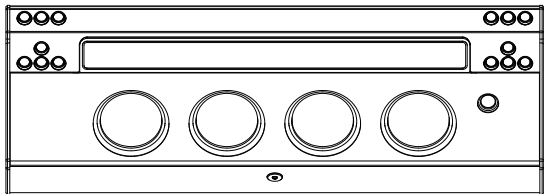

List



DIVALLER	1 PCS
Product Manual	1 PCS
TYPE-C to TYPE-A cable	1 PCS
TYPE-B to TYPE-A cable	1 PCS

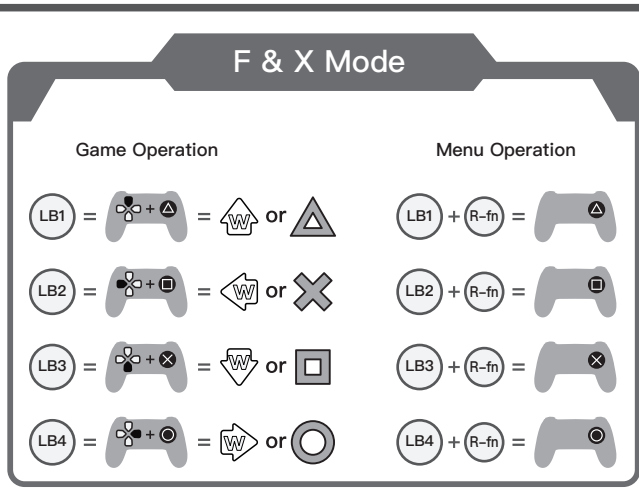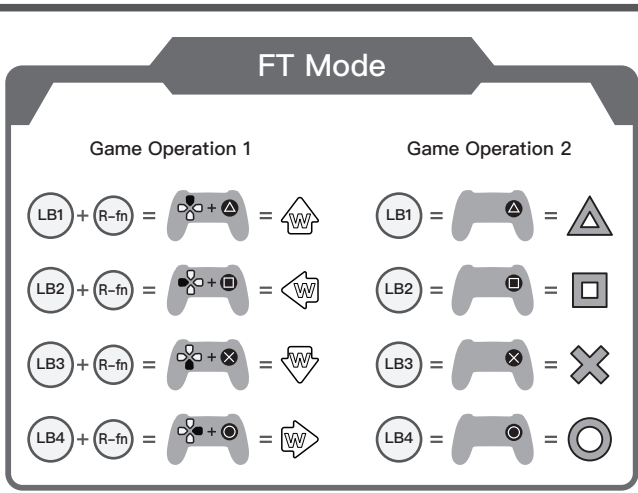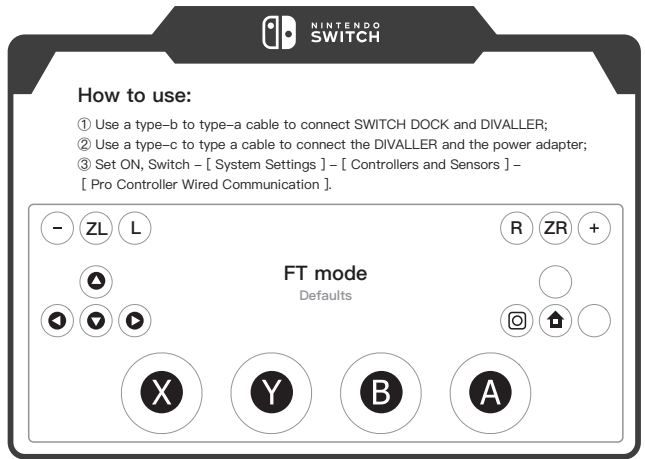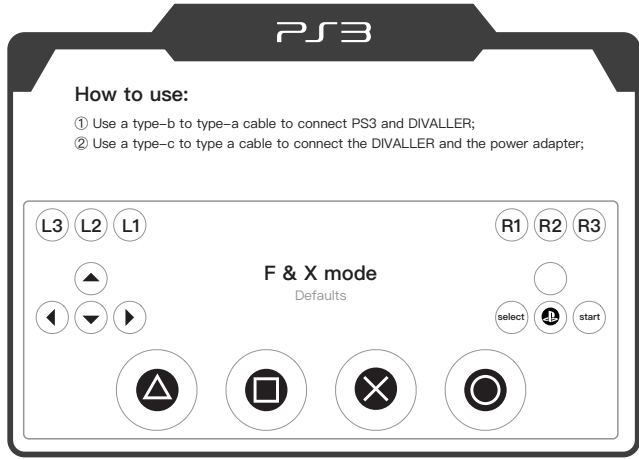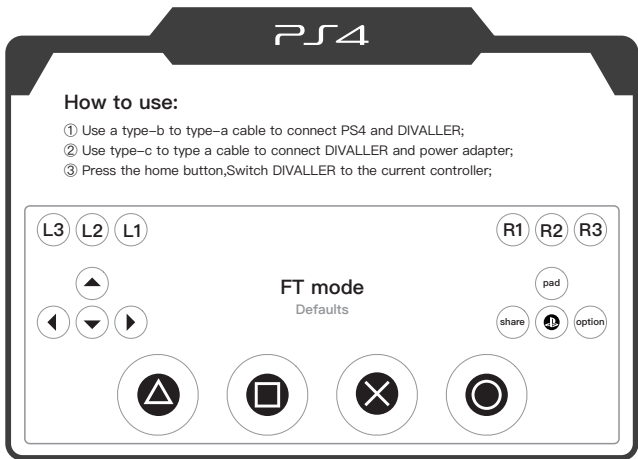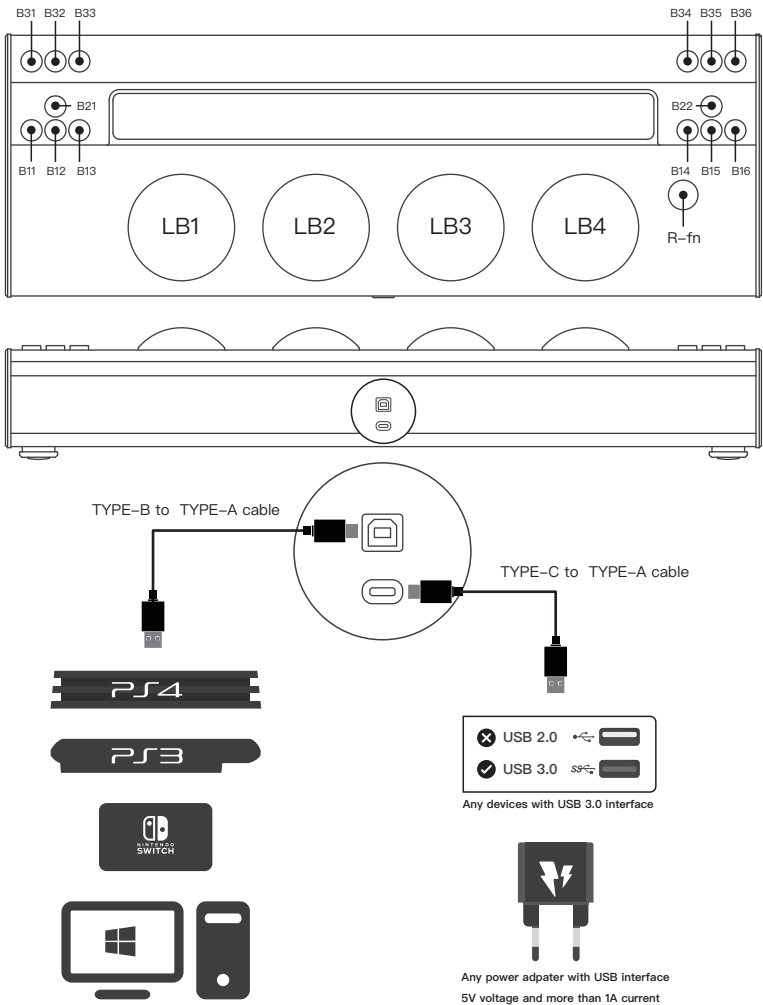      

Key Combination List


Press and hold the key combination for 1 second, the LB1-LB4 button lights flash 3 times, then it is successful.

R-fn + B31	Switch FT mode / F & X mode
R-fn + B32	PPD layoutt
R-fn + B33	DS4 layout
R-fn + B34	16KEY layout
R-fn + B11	Change Touch Slider color, hue value--.
R-fn + B13	Change Touch Slider color, hue value+.
R-fn + B21	Touch Slider Light mode switch, water ripple effect / rainbow effect.

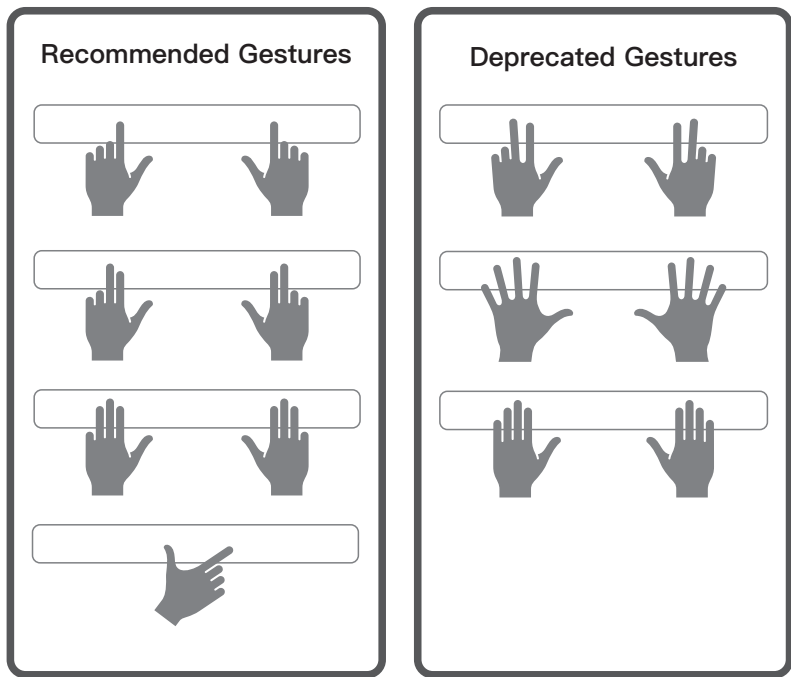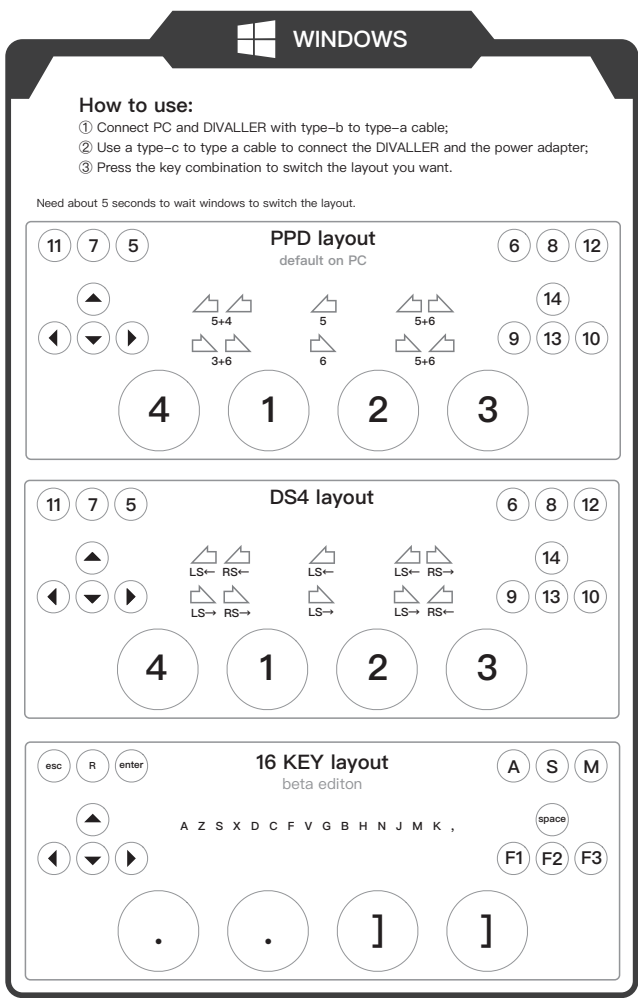  

!!! Cautions! ! !

 - 1 Plug and unplug the USB, it is recommended to wait for more than 5 seconds, and then plug the USB again;
- 2 Touch Slider, please not very slowly;
- 3 ☆ in F / F 2nd / X-HD, it is recommended that after a single slider,raise your hand before operating; Alternate sliding with both hands works better;

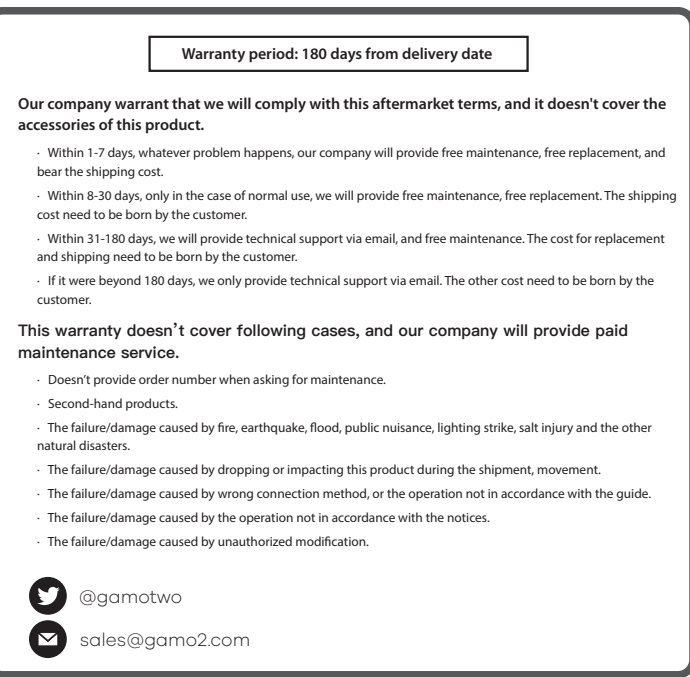

NINTENDO SWITCH is a registered trademark of Nintendo Corporation

PS3 PS4 is a registered trademark of Sony Corporation

F / F 2nd / X-HD / FT is the abbreviation of SEGA company projectDIVA gamev