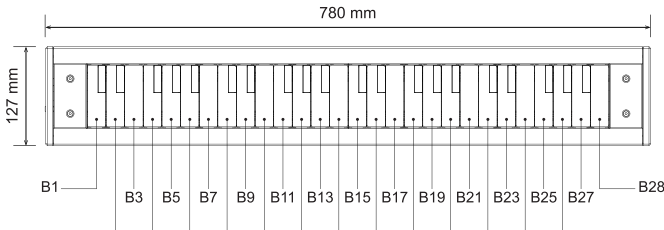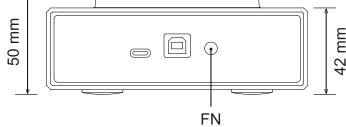Thank you so much for purchasing **NOSTROLLER.**
Please read this manual carefully before use.

What's in the box

○ NOSTROLLER Game Controller ···· **1**
○ User's Manual ···················· **1**
○ USB-A to USB-B Cable ·············· **1**
○ USB-A to USB-C Cable ·············· **1**

50 mm   42 mm

FN

780 mm
127 mm

B1   B3   B5   B7   B9 B11 B13 B15 B17 B19 B21 B23 B25 B27   B28
   B2   B4   B6   B8 B10 B12 B14 B16 B18 B20 B22 B24 B26

Press the key combination and hold for one second, the button light corresponding to the current key mapping mode is begin to light up and blink, indicating that the mode switch is successful.

| **FN + B2** | MIDI mode | **FN + B3** | HID mode |
| **FN + B4** | Keyboard mode | **FN + B5** | Controller mode |

Double click **FN** to display the current mode.
More modes are in development and yet to be added in the future,
for more information please follow @GamoTwo on Twitter.
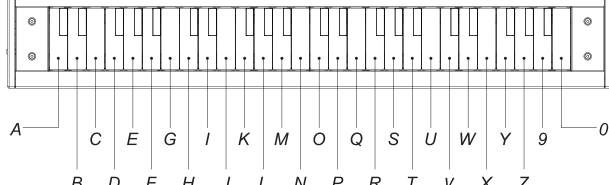
○ MIDI mode (default mode)

Dedicated to the playing for Konaste Nostalgia (KONAMI official Nostalgia PC version) game, driver-free, plug & play.

○ HID mode
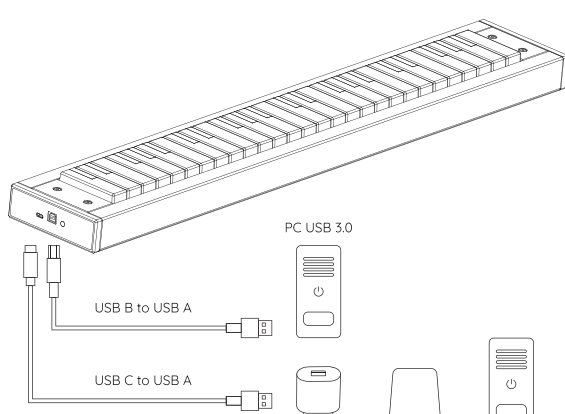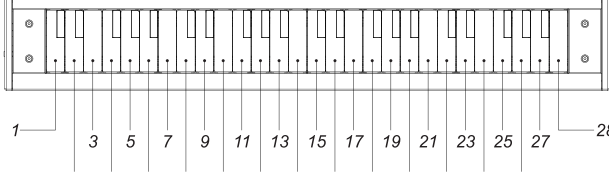
NOSTROLLER will be recognized as custom **USB** device.

○ Keyboard mode

Can be used for playing Konaste Nostalgia as well, and also can be used to play other games.

A   C   E   G   I   K   M   O   Q   S   U   W   Y   9   0
   B   D   F   H   J   L   N   P   R   T   V   X   Z

○ Controller mode

NOSTROLLER will be recognized as a generic gamepad, any game that supports a generic controller can be played in this mode.

1   3   5   7   9   11   13   15   17   19   21   23   25   27   28
   2   4   6   8   10   12   14   16   18   20   22   24   26

PC USB 3.0

USB B to USB A

USB C to USB A

Mobile phone   Mobile power   PC USB 3.0
USB charger

⚠ Attention

※1. It is NOT RECOMMENDED to connect NOSTROLLER to PC by an USB hub, If it has to be used, please use an **USB-HUB with independent power supply**.

※2. It is recommended to connect the **USB B** cable of the NOSTROLLER to the USB port from the PC's motherboard.

※3. The **USB C to A** cable can be connected to any **USB A** port that provides more than **1A** of current. Power can also be supplied using an **USB C to C** cable.

Cautions

⚠ If the NOSTROLLER is not disassembled and the order of the keys is changed, then no further calibration is required.

⚠ If NOSTROLLER has to be calibrated, please check the detailed calibration tutorial. Incorrect calibration will cause NOSTROLLER not to work properly. But don't worry, NOSTROLLER will be back to normal after another correct calibration.

⚠ The power consumption of NOSTROLLER is within **300mA** (without the power of RGB lighting), and most **USB2.0** ports can provide at least **300mA** current. If the device is not working properly, please connect the **USB B** cable to the USB port on the back of the PC's motherboard, where it will provide an adequate current supply.

⚠ It is NOT RECOMMENDED to connect NOSTROLLER to PC by a USB hub, If it has to be used, please use an **USB-HUB** with an independent power supply.

⚠ The **USB C to A** cable can be connected to any **USB A** port that provides more than **1A** of current. Power can also be supplied using an **USB C to C** cable.

For the usage of the adjustment software and calibration procedures, please visit dj-dao.com/en/support

@gamotwo

sales@gamo2.com